

REPLACE YOUR VALVES ON EVERY TYRE CHANGE!

Valves are subject to heavy strain and environmental influences.
This can lead to loss of pressure in the tyre and therefore a safety risk.

CAUSES FOR AIR LOSS:

- Brittle rubber
- Corrosion on valve core
- External damage

CONSEQUENCES OF AIR LOSS:

- Unsafe handling up to losing control
- Extended braking distance
- Higher fuel consumption
- Higher rolling resistance
- Increased tyre wear

OLD AGAINST NEW



**RELY ON THE QUALITY OF VALVES FROM HOFMANN POWER WEIGHT.
FOR YOUR OWN SAFETY !**